

7. Disassemble Guide

7.1 How to Remove the filter


Step1:

Put your hands at A and B, lift the filter a little to loosen the fastener




Step2:

Pull the filter gently along the horizontal direction.

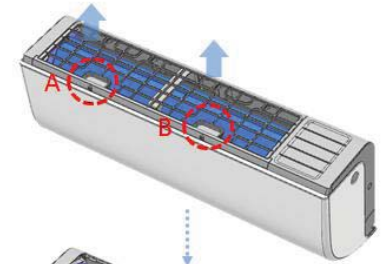

Step3:

Pull out the filter.

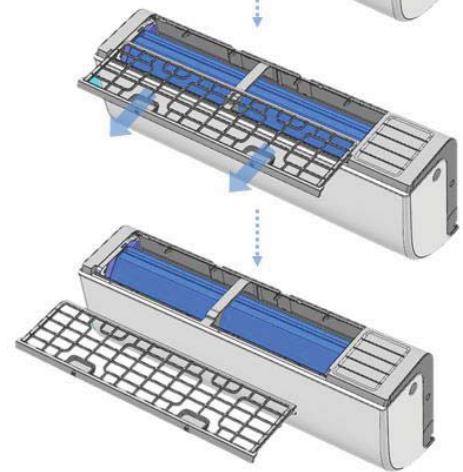

7.2 How to Remove the horizontal louver

Step1:

Open the horizontal louver, push the locker towards right to open it.



Step2:

Bend the horizontal louver lightly; remove it from the indoor unit.

